


# Connecting the EM4000 to a PC

## Wiring diagram SUBD-9P to RJ45 Adapter.

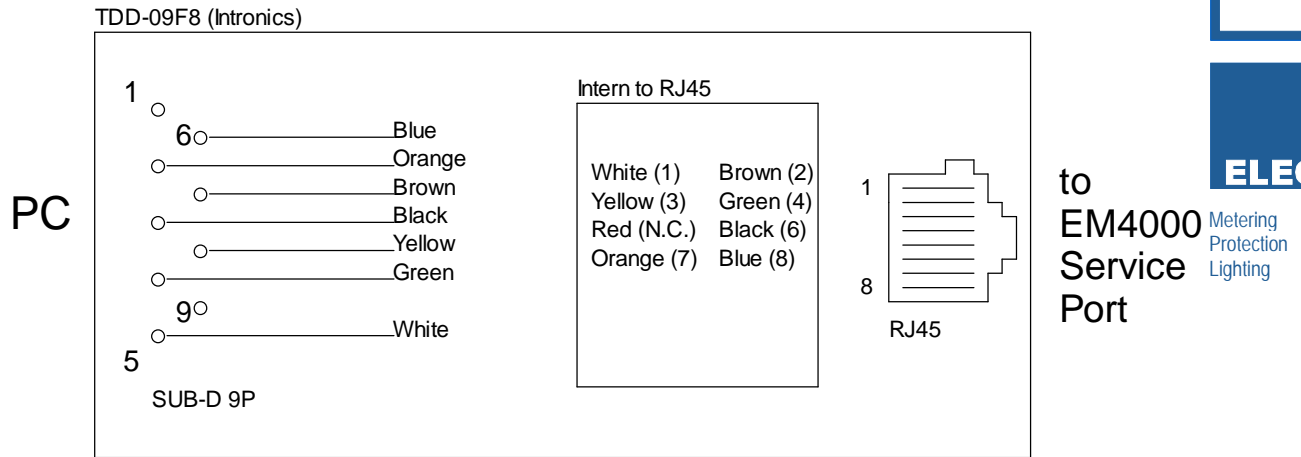

In combination with 1 : 1 RJ45 cable

Connect the 1 : 1 serial interface cable to the RJ45 Service Port on the EM4000.  
Connect the Sub-D connector to COM1 on your PC.

Data port settings (RTU) Software versions up to 2.54

Address 40003 03h is RS232 9k6 no parity 8-databits 1-stopbit  
Address 40003 83h is RS485 9k6 no parity 8-databits 1-stopbit

Data port settings (RTU) Software versions later then 2.54

Address 40003 14h is RS232 19k2 even parity 8-databits 1-stopbit  
Address 40003 94h is RS485 19k2 even parity 8-databits 1-stopbit

For further details see Holding Register Table.