

Technical Specification

Safety and environmental conditions

CE marking	LV directive 2006/95/EC RoHS directive 2011/65/EU WEEE directive 2012/19/EU
Standard	EN-IEC 61439-2:2011 EN-IEC 60269-3:2013

This product is designed to be safe under the following conditions:

Specification

Environmental conditions Operating temperature: Relative humidity: Protection degree: Installation class: Pollution degree:	-5°C - +55°C 5% - 85%, non condensing IP23 1 (protective earth) 2
Application conditions Umax: Frequency: Imax: Imax to armature: Fuse:	230/400V 50Hz 50A (mantle terminals) 6A 5L5001: DII (E27), max 6A 5L5301: D01 (E14), max 6A
Strain relief: Maximum wire cross section and torque:	Yes, maximum two ground cables 18mm and 1 light pole cord Terminal 1, 2, 3, 4, 5: 2x 10mm ² or 3x 6mm ² , 2-4Nm Terminal 5, 6, 7, 8: 4mm ² , 1-2Nm
Diameter ø Height	74mm 265mm
Storage Temperature: Relative humidity:	-20°C - +70°C 5% - 85%, non condensing
Approval	KEMA-keur

Specification per type

	5L5001	5L5001-6A	5L5103
Fuse included		6A	6A
Neutral Disconnecter			Yes
Weight	450gr	520gr	540gr

Please be aware, product liability, fulfilment to requirements and warranty are all expired when modifications on the product are made.

ELEQ reserves the right to carry out modifications on its products, in order to improve them, without prior notice.

Safety instruction

All activities for installation, commissioning and maintenance of this connection box must be performed by qualified personnel that has the knowledge of applicable safety precautions. This guide assumes that the reader of this document has sufficient electro-technical knowledge to understand the content of this document.

General

The LS-74 is a connection box for public lighting and intended to be used in lighting poles. The connection box should be mounted in a weather protected and dry location. In the connection box the incoming (ground) cable can be connected. If desired, looped circuits wiring to the next lighting pole is possible. The cable of the armature should be connected on the outgoing terminals.

Fuses protect the installation against overload and short-circuiting.

Explanation of symbols



This product is designed according to the EN-IEC 61439-2:2011 standards and meets the requirements of the Low Voltage Directive 2006/95/EC.



Read the installation guide before mounting the product. Unprofessional work activities on electrical installations may result in a threat of danger to the life and health of human beings and livestock!



RoHS Directive 2011/65/EU

ELEQ states that it uses qualified components in its products only from manufacturers which meet the requirements of the European Directive for the "Restriction of use of certain Hazardous Substances"



WEEE Directive 2012/19/EU

This equipment should not be disposed as unsorted municipal waste. Contact a qualified recycler for disposal.



mastering electricity
worldwide

LS-74 Connection Box for Public Lighting Installation Guide



5L5103

LS-74

5L5001
5L5001-6A
5L5103

Read this installation guide before installing the product

—part of a smart world—

ELEQ b.v.
Tuksnsweg 130, 8331 LH Steerwijk, The Netherlands
+31 (0) 521 533 333 info@eleq.com www.eleq.com

—part of a smart world—

ELEQ b.v.
Tuksnsweg 130, 8331 LH Steerwijk, The Netherlands
+31 (0) 521 533 333 info@eleq.com www.eleq.com


Always avoid working on live parts of an installation.

Functional Description


The terminal boxes of the LS-74 series all are intended to be fitted with one DII or D01 fuse. Het fuse capacity is limited to max 6A.

Assembly

1. Ensure a safe working area during assembly, maintenance and inspection of the connection box. Disconnect the power of the main circuit and make sure it cannot be enabled unintentionally.
2. Remove the transparent cover, mounted fuse and the intermediate cover.
3. Mount the connection box with the upper and lower connection in the lighting pole.
4. Connect the incoming and (if present) outgoing ground cable to terminals 1 through 5.
5. Mount the outgoing cables to the armature.
6. Tightly mount strain relief block.
7. Check if the connections are mounted properly and firmly.
8. Install the fuse(s). Fuse type: DII (E27) for 5L5001 or D01 (E14) for 5L5301. Max 6A.
9. Mount the transparent cover and screw tightly.

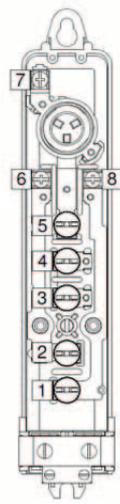

5L5001

 

5L5103

Incoming


- 1 = PE - Protective earth
- 2 = Neutral
- 3 = phase L1
- 4 = phase L2
- 5 = phase L3

Outgoing

- 6 = Neutral
- 7 = fused phase L3
- 8 = PE - Protective earth

If required, incoming terminals 1 through 5 can be looped to the next lighting pole.

Wiring Diagram

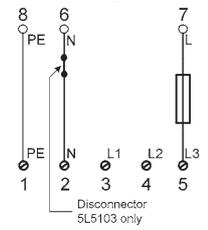

Maintenance and inspection

- The connection box should be situated on a dry and clean location.
- The connection box should be mounted firmly.
- The connections should be mounted firmly.

Attention

Always avoid working on live parts of an installation.

Disassembly instruction

1. Disconnect the power of the main circuit and make sure it can not be enabled unintentionally.
2. Unmount the transparent cover.
3. Remove the fuses.
4. Remove the strain relief block.
5. Disconnect the ground cables.
6. Disconnect the connection box from the lighting pole.

Recycling

When the product has reached 'end of life', it must be recycled. Do not dispose this product as unsorted municipal waste. Contact a qualified recycler for disposal.