


# AANSLUITSCHEMA'S

## COMPACT-OMVORMERS EM800 serie

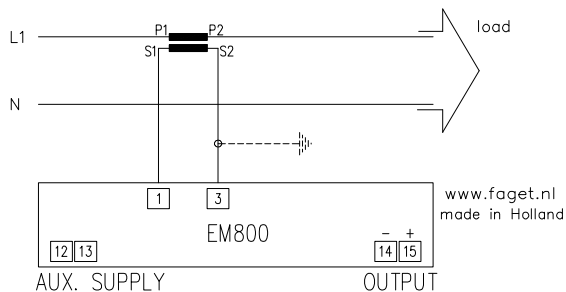


**S1 EM800**




S1

**S2 EM800**

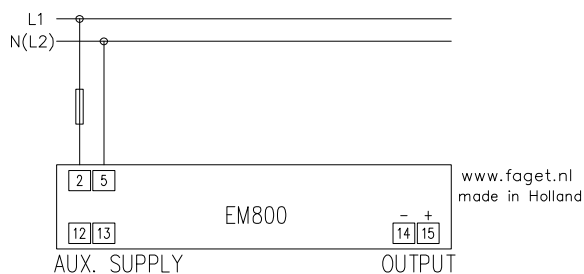


S2

**S2-2 EM800**

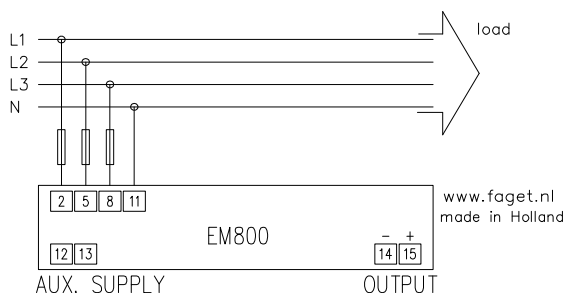


S2-2

**S2-3 EM800**

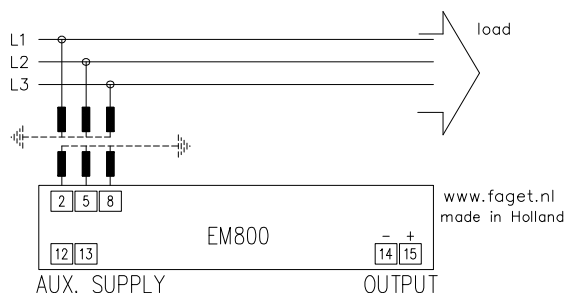


S2-3

**S3 EM800**

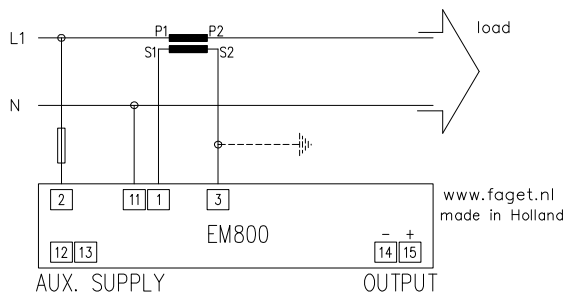


S3

**S3-1 EM800**

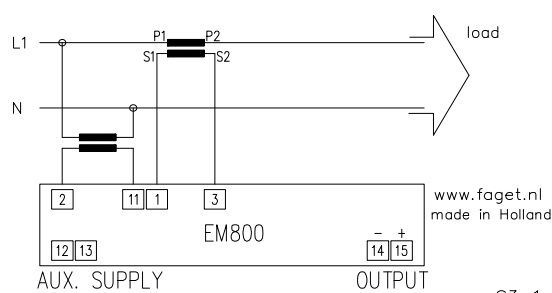


S3-1

**S4 EM800**

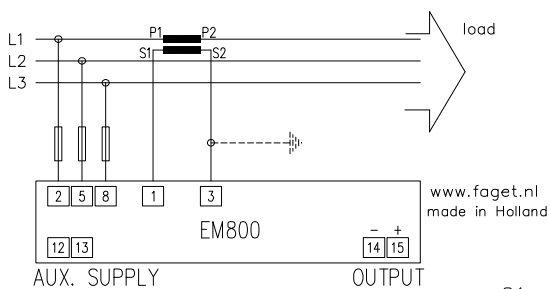

S4

**S4-1 EM800**

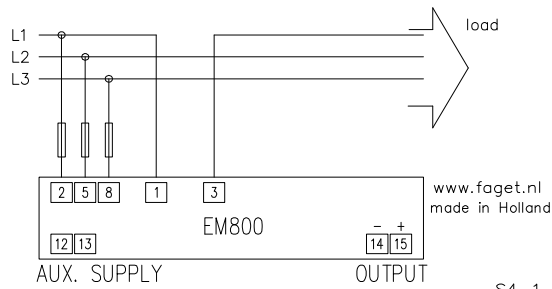


S4-1

# AANSLUITSCHEMA'S

## COMPACT-OMVORMERS EM800 serie


FAGET

S4-2 EM800

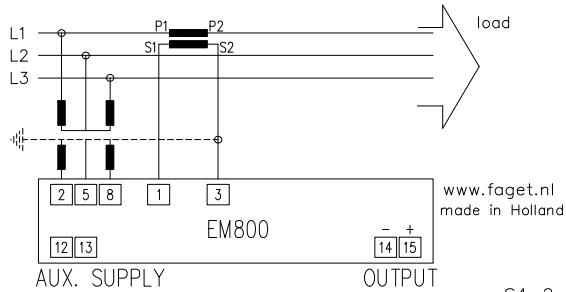


S4-2

S4-3 EM800

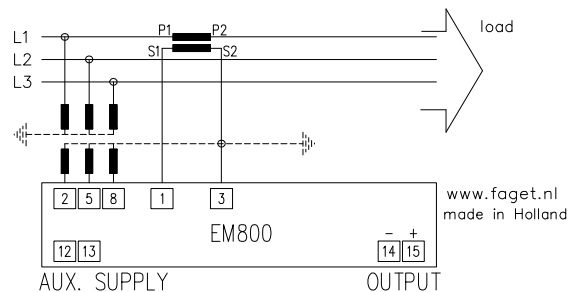


S4-3

S6 EM800

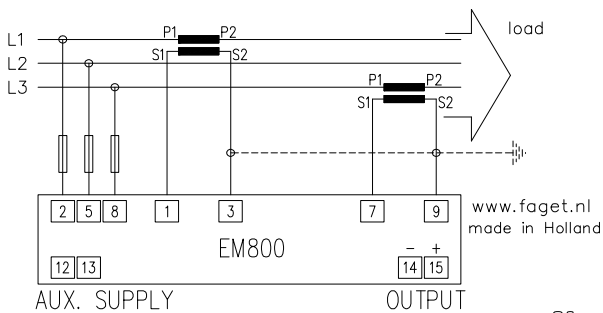


S6

S6-1 EM800

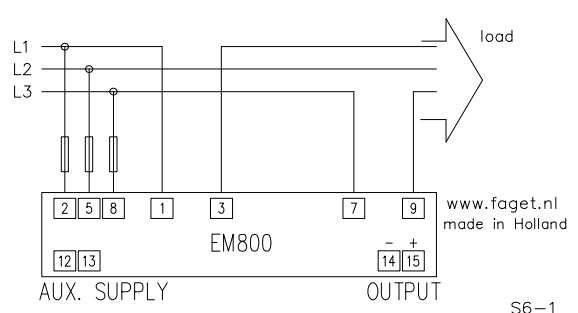


S6-1

S6-2 EM800

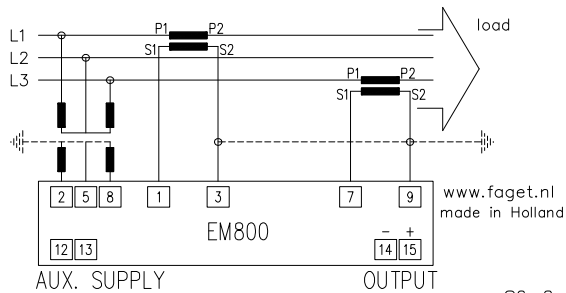


S6-2

S6-3 EM800

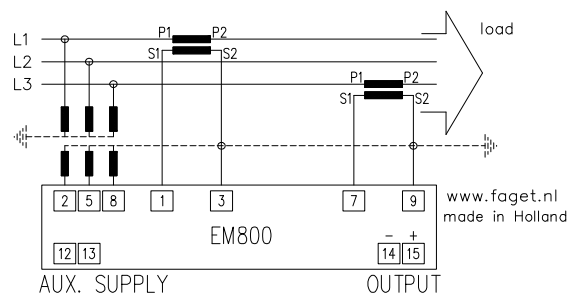


S6-3

S7 EM800

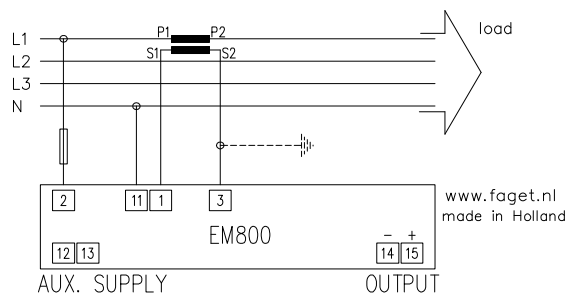

S7

S7-1 EM800

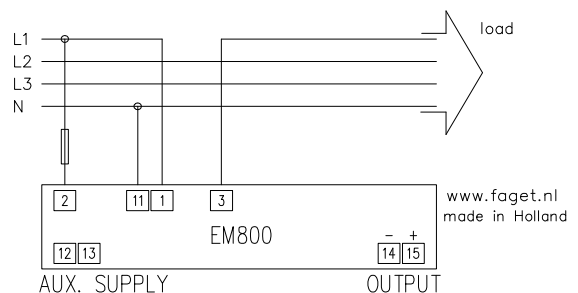


S7-1

# AANSLUITSCHEMA'S

## COMPACT-OMVORMERS EM800 serie




S7-2 EM800

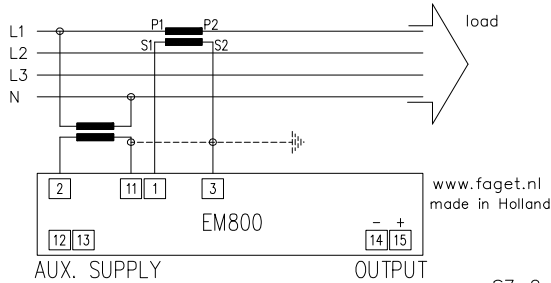


S7-2

S9 EM800

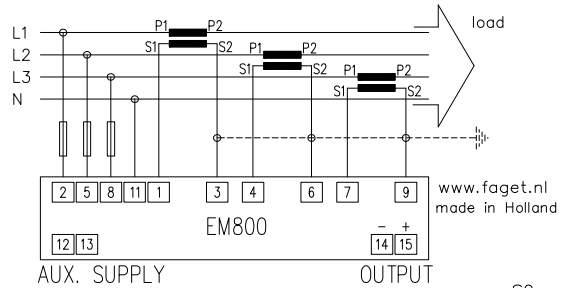


S9

S9-1 EM800

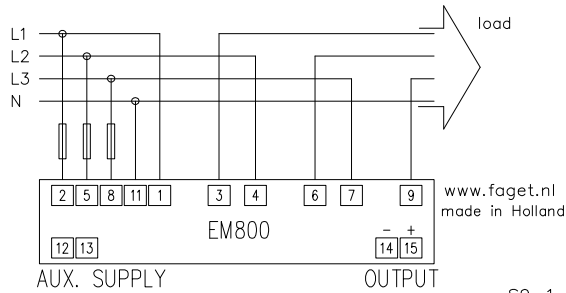


S9-1

S9-2 EM800

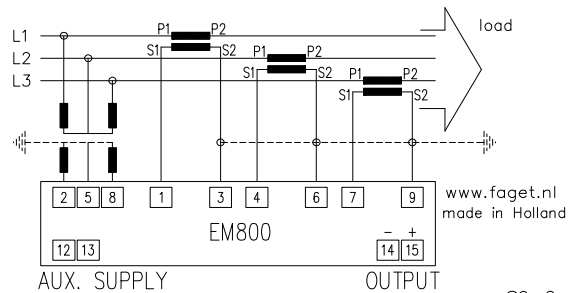


S9-2

S9-3 EM800

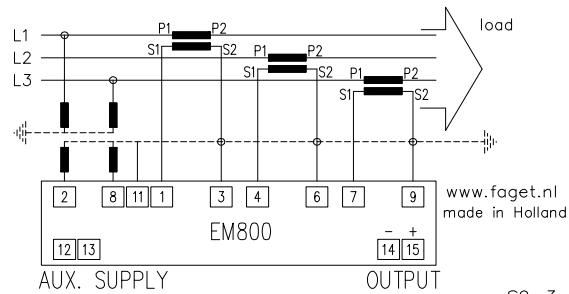


S9-3

S9-4 EM800

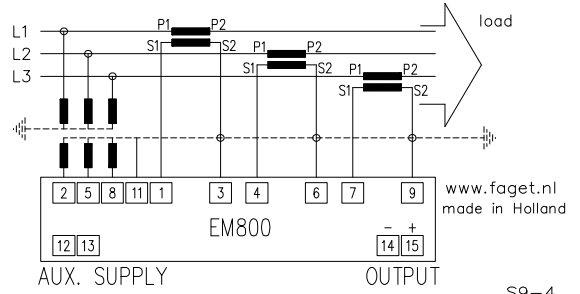

S9-4

S9-5 EM800

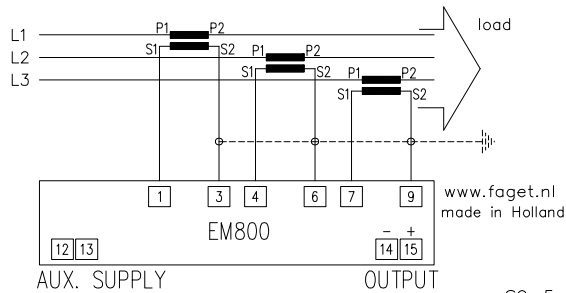

S9-5