

Technical Specification

Safety and environmental conditions

CE marking	LV directive 2014/35/EC RoHS directive 2011/65/EU WEEE directive 2012/19/EU
Standard	EN-IEC 61439-2:2011

This product is designed to be safe under the following conditions:

Specification

Environmental conditions	
Operating temperature:	-5°C - +55°C
Relative humidity:	5% - 85%, non condensing
Protection degree:	IP23
Installation class:	1 (protective earth)
Pollution degree:	2
Application conditions	
U _{max} :	400V (one phase)
I _{nA} :	63A (mantle terminals)
Frequency:	50Hz
Fuse:	1x D01 (E14), max 16A
Strain relief:	Yes, maximum 2 ground cables 23mm and 2 light poles cords
Maximum wire cross section and torque :	Terminal N, 1, 2, 3: 2x 16mm ² , 2-4Nm Terminal 4, 5: 2.5mm ² 1-2Nm
Diameter ø (mm)	84
Height (mm)	279.5
Storage	
Temperature:	-20°C - +70°C
Relative humidity:	5% - 85%, non condensing

Specification per type

	5L1301	5L1302	5L1303	5L1304	5L1305
Fuse included	No	No	1 x 6A	1 x 10A	1 x 16A
PE-N connection	No	Yes	Yes	Yes	Yes
Weight (gr)	550	560	570	570	570

Please be aware, product liability, standards and warranty are all expired when modifications on the product are made.

ELEQ reserves the right to carry out modifications on its products, in order to improve them, without prior notice.

Safety instruction

All activities for installation, commissioning and maintenance of this connection box must be performed by qualified personnel that has the knowledge of applicable safety precautions. This guide assumes that the reader of this document has sufficient electro-technical knowledge to understand the content of this document.

General

The LS-84 is a connection box for public lighting and intended to be used in lighting poles. The connection box should be mounted in a weather protected and dry location. In the connection box the incoming (ground) cable can be connected. If desired, looped circuits wiring to the next lighting pole is possible. The cable of the armature should be connected on the outgoing terminals.

Fuses protect the installation against overload and short-circuiting.

Explanation of symbols



This product is designed according to the EN-IEC 61439-2:2011 standards and meets the requirements of the Low Voltage Directive 2014/35/EC.



Read the installation guide before mounting the product. Unprofessional work activities on electrical installations may result in a threat of danger to the life and health of human beings and livestock!



RoHS Directive 2011/65/EU

ELEQ states that it uses qualified components in its products only from manufacturers which meet the requirements of the European Directive for the "Restriction of use of certain Hazardous Substances"



WEEE Directive 2012/19/EU

This equipment should not be disposed as unsorted municipal waste. Contact a qualified recycler for disposal.



mastering electricity
worldwide

LS-84 Connection Box for Public Lighting Installation Guide



5L1301

LS-84 phase selectable

5L1301
5L1302
5L1303
5L1304
5L1305

Read this installation guide before installing the product

—part of a smart world—

ELEQ b.v.
Tuksweg 130, 8331 LH Steerwijk, The Netherlands
+31 (0) 521 533 333 info@eleq.com www.eleq.com

—part of a smart world—

ELEQ b.v.
Tuksweg 130, 8331 LH Steerwijk, The Netherlands
+31 (0) 521 533 333 info@eleq.com www.eleq.com

Always avoid working on live parts of an installation.

Functional Description

The connection boxes of the 5L130x series all are intended to be fitted with one D01 fuse. The fuse capacity is limited to 16A.

All types are provided with phase selection: the phase to be connected to the fuse has to be chosen by the black selection pin (screw type).

The neutral can be insulated from the grid by means of the neutral disconnecter.

Assembly


Attention

Remove the fuse during assembly of the connection boxes

1. Ensure a safe working area during assembly, maintenance and inspection of the connection box. Disconnect the power of the primary circuit and make sure it cannot be enabled unintentionally.
2. Remove the transparent lid, fuse, phase selection pin and the intermediate cover. Mount the connection box with the upper and lower connection in the lighting pole.
3. Connect the incoming and (if present) outgoing ground cable to terminals N, 1, 2, 3 and PE.
4. Mount the outgoing cables to the armature(s) on terminals 4, 5 and PE.
5. Tightly mount strain relief block.
6. Check if the connections are mounted properly and firmly and place the intermediate cover.
7. Choose the incoming phase to be connected to the fuse by screwing the phase selection pin in the associated hole

8. Install the fuse. Note: fuse type: D01 (E14), max 16A.

9. Mount the transparent lid and screw tightly.

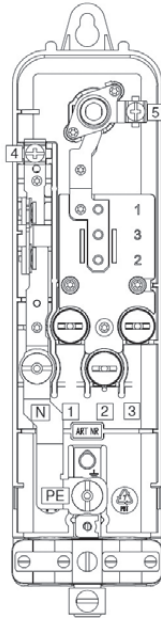

Incoming


PE = protective earth
N = Neutral
1 = Phase L1
2 = Phase L2
3 = Phase L3

Outgoing

4 = Neutral wire to armature
5 = Phase wire to armature

If required, incoming terminals N, 1, 2 3 and PE can also be looped to the next lighting pole.

Wiring Diagram

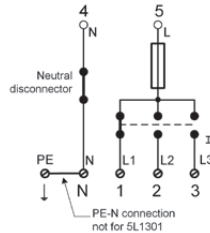

Attention

All types are provided with phase selection: the phase to be connected to the fuse has to be chosen by the black selection pin (screw type).

Maintenance and inspection

- The connection box should be situated on a dry and clean location.
- The connection box should be mounted firmly.
- The connections should be mounted firmly.

Attention

Always avoid working on live parts of an installation.

Disassembly instruction

1. Disconnect the power of the main circuit and make sure it cannot be enabled unintentionally.
2. Unmount the transparent lid.
3. Remove the fuse and the phase selection pin
4. Remove the strain relief block.
5. Disconnect the ground cables.
6. Disconnect the connection box from the lighting pole.

Recycling

When the product has reached 'end of life', it must be recycled. Do not dispose this product as unsorted municipal waste. Contact a qualified recycler for disposal.